

Hearing Aid Instructions



On (door closed)



Off (door open)



For left ear

Blue

For right ear

Red



Change your battery every 7-10 days or when it beeps to tell you



Use orange battery packets



Insert correct way up



Yes




No



Beeps, Batteries and Telecoil



Beeps when turns on

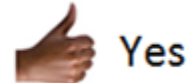


Beeps when button pressed



Beeps when battery needs changing



Roll wheel

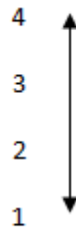

Louder (volume up)

Quieter (volume down)

Telecoil Loop available?



Yes



No

You can use the Telecoil where you see this sign



Bank or Post Office



Cinema or Theatre



Church



Home (Tv and telephone)



You need special equipment to use it at home

Press to turn Telecoil Loop on

Press again to turn off





Change program (press 1 second)

Program 1:

Program 2:

Program 3:

Both hearing aids will change program together

