

Hearing Aid Instructions



On (door closed)



Off (door open)



For left ear

Blue

For right ear

Red



Change your battery every 7-10 days or when it beeps to tell you



Use orange battery packets



Insert correct way up



Yes





No



Beeps, Batteries and Telecoil



Beeps when turns on  Yes

Beeps when button pressed  Yes

Beeps when battery needs changing

 Yes



Louder (volume up)

Quieter (volume down)

Telecoil Loop
available?



Yes





No


You can use the Telecoil where you see this sign



Bank or Post Office  Yes

Cinema or Theatre  Yes

Church  Yes

Home (Tv and telephone)  No

You need special equipment to use it at home

Telecoil on (press 1 second)

Telecoil off (press 1 second)





Change program (press 1 second)

Program 1:

Program 2:

Program 3:

Both hearing aids will change program together

