

# Hearing Aid Instructions



**On** (door closed)



**Off** (door open)



For left ear

**Blue**

For right ear

**Red**



Change your battery every 7-10 days or when it **beeps to tell you**



Use **brown** battery packets



Insert correct way up



Yes



No



# Beeps, Batteries and Telecoil



Beeps when turns on



Yes

Beeps when button pressed



Yes

Beeps when battery needs changing



Yes



Left Ear

Louder (volume up)

Quieter (volume down)



Right Ear



Left Ear

**Press to change program:**

Program 1:

Program 2:

Program 3:



Right Ear

Telecoil Loop  
available?



No

**This hearing aid does not have the  
Telecoil loop function.**

