

Hearing Aid Instructions



On (door closed)



Off (door open)



For left ear

Blue

For right ear

Red



Change your battery every 7-10 days or when it beeps to tell you



Use **brown** battery packets



Insert correct way up



Yes



No



Beeps, Batteries and Telecoil



Beeps when turns on



Yes

Beeps when button pressed



Yes

Beeps when battery needs changing



Yes



Left Ear

Louder (volume up)

Quieter (volume down)



Right Ear



Left Ear

Press to change program:

Program 1:

Program 2

Program 3:



Right Ear

Telecoil Loop
available?



No

**This hearing aid does not have the
Telecoil loop function.**

