

Hearing Aid Instructions



On (door closed)



Off (door open)



For left ear

Blue

For right ear

Red



Change your battery every 7-10 days or when it beeps to tell you



Use orange battery packets



Insert correct way up



Yes



No



Beeps, Batteries and Telecoil



Beeps when turns on



Yes

Beeps when button pressed



Yes

Beeps when battery needs changing



Yes

Telecoil Loop available?



Yes



No

You can use the Telecoil where you see this sign

Portable Induction Loop



Bank or Post Office



Yes

Cinema or Theatre



Yes

Church



Yes

Home (Tv and telephone)



No

You need special equipment to use it at home

Press to turn Telecoil loop on

Press again to turn Telecoil loop off



Change program

Program 1:

Program 2:

Program 3:

Both hearing aids will change program together



Hearing Aid Instructions – Using the button



Left Ear

Louder (volume up)

Quieter (volume down)



Right Ear

